



PocketScope Endoscope Camera

Model No. TM-TV90Pro

New



The PocketScope is a real pocket-size endoscope camera with its 1m camera tube wound inside the back part of the product. Featured with 5.5mm semi-flexible tube, HD 720P resolution, SD card recording, etc; It's a great tool for inspections in hard to reach areas.

720P



**micro
SD**
SD card

3.0"
TFT Screen


Weather Proof

5.5mm
Camera Diameter


Recording


Color


Night Vision


Pocket Size

PocketScope Endoscope Camera

Unique Design

This is the **world's first** endoscope camera that allows you to wind the camera tube inside the back part of the product. A big plastic tool case is not needed anymore. It saves a lot of space and weight in your daily work.

Besides, the bi-color injection molding makes this product **neat, compact and drop resistant**.



720P HD Camera

The 5.5mm 720P HD camera (together with the 2X times zoom) allows you to see even the most tiny objects clearly.



***Comes with hook, mirror and magnet
(Metal Robust Version)***



PocketScope Endoscope Camera

Features

- ◆ Real Pocket Size endoscope with camera tube wound inside the back part of the product
- ◆ HD 720P resolution
- ◆ 5.5mm semi- flexible camera tube
- ◆ 6 white leds
- ◆ 3" LCD display
- ◆ Support MicroSd card for still images capture and video recording
- ◆ Comes with a flashlight
- ◆ Handheld and durable design
- ◆ Small accessories - Hook, mirror and magnet

Specifications


Items	Specifications	Items	Specifications
Snake Tube Camera		Video input/Output	1280*720
Camera Lens	SCMOS	Image/Video Resolution	1280*720
Resolution	1280*720	Signal Format	Digital
Viewing Angle	65°	Image Format	.JPG
Focal Distance	4CM	Video Format	.AVI
Depth of Field(DOF)	0.7CM-30CM	Internal memory	Micro SD card
Light Source	6LEDs	Flashlight	
LED Light Irradiation Distance	30CM	Power Output	0.5W
Camera Outer Diameter	5.5MM	Power Supply	
Length of Metal Camera Part	3CM	Working Voltage	6V
Video Output	/	Working Current	380MA
Working Current	95MA	Internal Dry Battery	4AA
Working Voltage	3.5V-5V	Work Time	
Working Temperature	-10°~60°	Continuous working time	> 3Hours(Typical)
TFT Display		Product Dimension	
Size(Active area)	3inch	L*W*H (mm)	160mm x 85mm x 35mm
Resolution	640*480	Product Weight	
Luminance for LCM	400	Unit (g)	289g
Image Zoom	1-3times(1.0X, 1.5X, 2.0X)	Package Dimension	
Image flip	180°flip	L*W*H (mm)	180mm x 120mm x 40mm
Brightness Control	/	Package Weight	
Video		Unit (g)	473g

Support MicroSD card



Micro SD Card for taking images or video recording

Parts for a kit

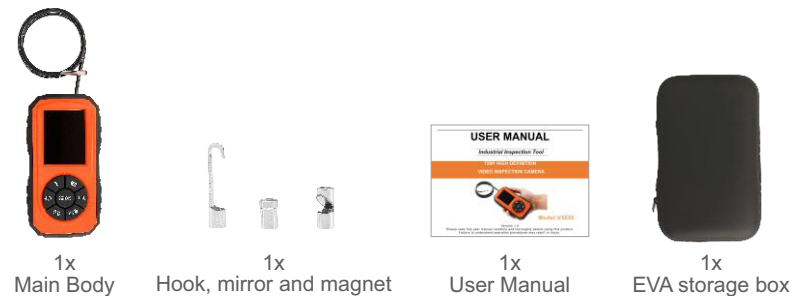

Supplied by : TEST AND MEASUREMENT INSTRUMENTS C.C.
www.instrumentsgroup.co.za Tel: 011 683 4365
Email: sales@instrumentsgroup.co.za